

SHOWER CURTAIN DISPLAY

PAGE 1 OF 2

ASY 272

INSTALLATION INSTRUCTION

1

Locate the Wire Grids in desired location on the base shelf, against the pegboard back. The right end mounts perpendicular to the back, the center and left ends mount at approximately 45 degrees to the back.

2

Locate the Fixture Clips on the pegboard so they fall between the horizontal wires of the grid.

3

Slide the Grid fixture clip. Do NOT tighten at this time.

4

Anchor the Wire Grid base to the base shelf using either the 1/4-20 machine screws, washers and 1/4-20 nuts or by using self tapping sheet metal screws.

5

Finally, tighten the fixture clips around the rear vertical wire of the grid.



