


# EXTENDED PEG PANEL MOUNT FOR VERTICAL DIVIDER BAR

## ASY-455

### ASSEMBLY AND INSTALLATION INSTRUCTIONS


**1**

Begin assembly with attaching first set of brackets. 3 brackets will be required on each row: one at each end of the board, and one in the middle. For up to 12" tall panels, attach TOP row of brackets only. For over 12", use top and bottom row, attaching bottom row ONLY FIRST.

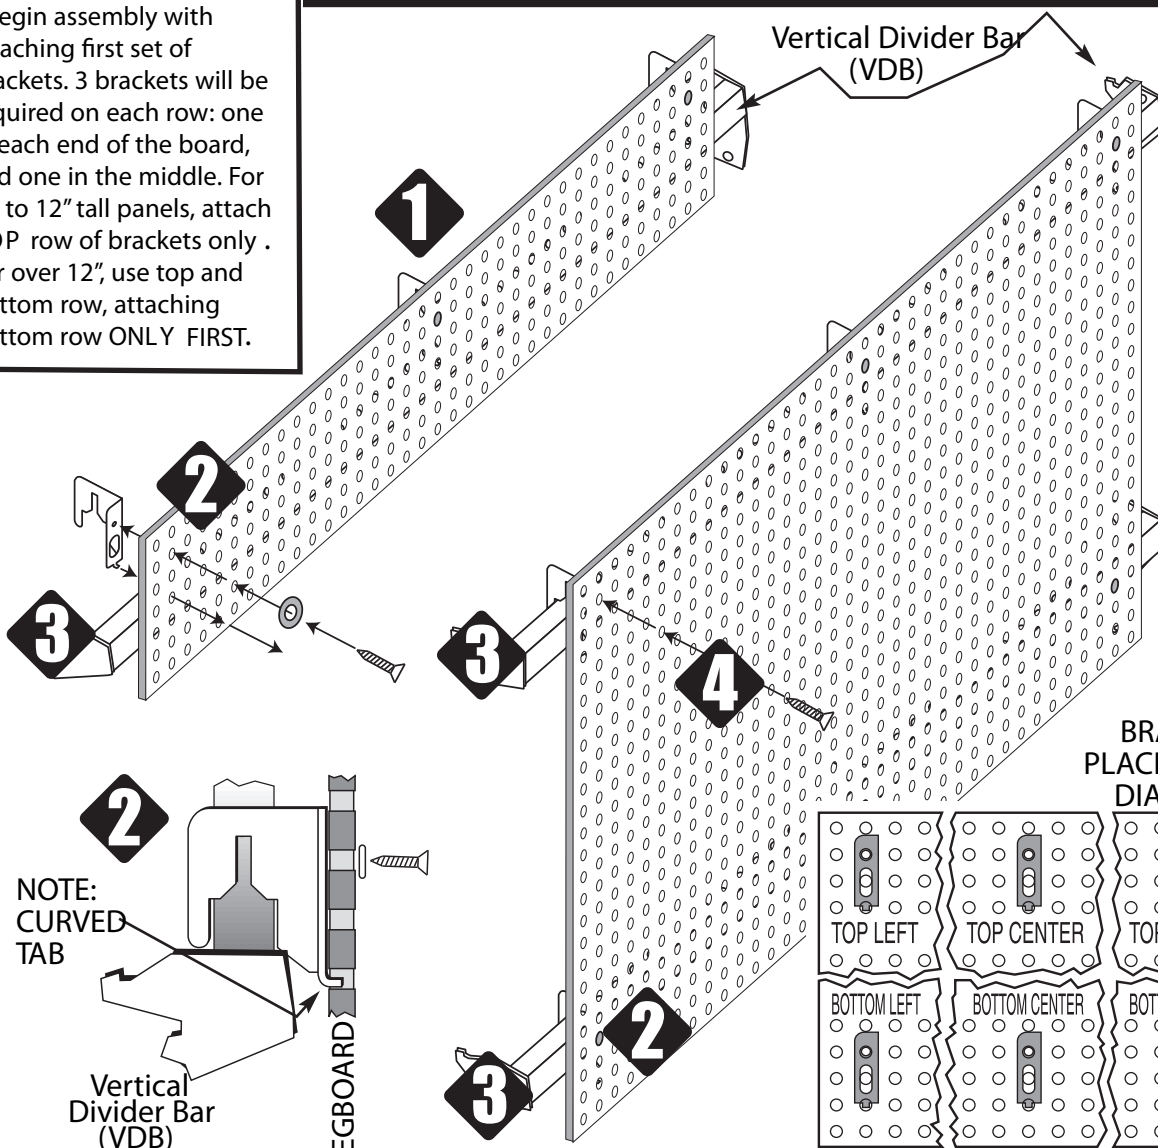

**2**

NOTE:  
CURVED  
TAB

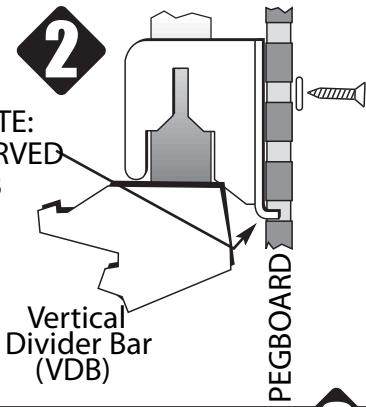

**2**

To attach brackets: align small hole in bracket with appropriate peg hole (see diagram) The curved tab at the bottom of the bracket will align and insert 2 peg hole rows down. Attach bracket by inserting #10 3/4" SM screw thru pegboard & #10 finish washer in to the small hole on the bracket.

**3**

If using 12" or smaller pegboard, hook it on to VDB, and assembly is complete. If using board over 12", (brackets are on bottom only at this point) hook it to the bottom VDB. Install upper VDB, and hook 3 remaining loose brackets to it so they align in the proper location.

**4**

Use washers and screws to attach top brackets to the top of the pegboard.

**ASSEMBLY COMPLETE**



P. O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349  
P. O. BOX 177 / GOOD WATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282

**REV 01**

REV#	ECN#	REVISION	BY	DATE	REV#	ECN#	REVISION	BY	DATE
01	5*3174	CHANGED #8 SCREW AND WASHER TO #10	CAB	04/02/07					
A		verticle divider bar correction	AJB	6/11/01					