


STANDARD SHELVING END PANELS

REV.	DESCRIPTION	DATE
02	CHANGED VERBIAGE OF BRACKET TO HOOK.	03/30/17

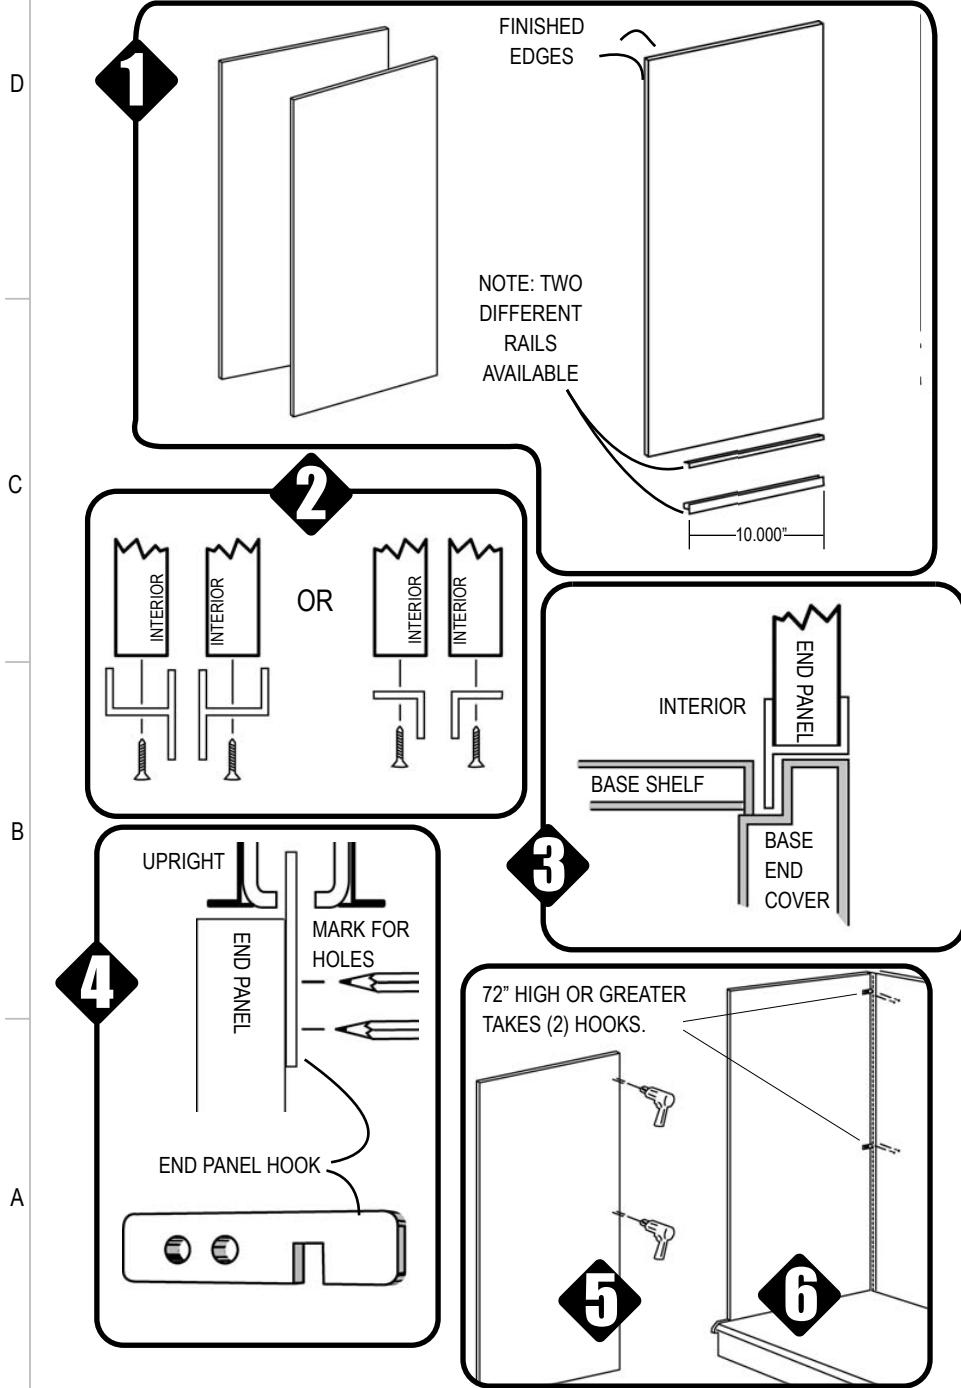

- 1** TO AVOID ERRORS IN INSTALLING THE BOTTOM RAILS, HANDLE PANELS AS PAIRS IN EACH RUN. **TURN PANELS WITH INTERIOR FINISHES FACING EACH OTHER.** NOTE: TWO VERSIONS OF THE BOTTOM RAIL ARE AVAILABLE.
- 2** IF THE BOTTOM RAIL IS "H" SHAPED, CENTER RAIL ON BOTTOM EDGE OF THE END PANEL WITH DOWN FLANGE TO INTERIOR AND SCREW TO THE PANEL.. IF BOTTOM RAIL IS ANGLE SHAPED, CENTER RAIL ON BOTTOM EDGE OF PANEL, WITH THE DOWN FLANGE FLUSH TO THE INTERIOR SIDE AND SCREW TO THE PANEL.
- 3** INSERT DOWN FLANGE OF BOTTOM RAIL BETWEEN BASE SHELF AND BASE END COVER.
- 4** NOTE: END PANELS LESS THAN 72" IN HEIGHT REQUIRE ONLY (1) ONE HOOK. END PANELS 72" OR GREATER IN HEIGHT WILL REQUIRE (2) TWO HOOKS. MARK PANEL FOR PILOT HOLES FOR SECURING HOOKS: STAND PANEL IN PLACE AGAINST UPRIGHT. ONE HOOK SHOULD ALWAYS BE LOCATED 6" FROM THE TOP OF THE UPRIGHT. ON PANELS ABOVE 72", LOCATE 2nd HOOK AT APPROXIMATELY THE CENTER OF THE HEIGHT OF THE PANEL.
- 5** REMOVE PANEL AND DRILL 1/16" DIAMETER BY 1/4" DEEP PILOT HOLES FOR THE SCREWS.
- 6** REPLACE PANEL AND SCREW PANEL HOOKS TO PANEL.

madix
Asy-545

P.O. BOX 729 TERRELL, TEXAS 75160
214-515-5400 / 800-776-2349

PAGE 1 OF 1 REV. 02
03/30/17 CAB ECM # 500000018859

4
4
4
4
4
4

3
3
3
3
3
3

2
2
2
2
2
2

1
1
1
1
1
1

D
C
B
A

D
C
B
A