

# ASY FOR SHOE BENCH END CAP

REV. 2

DESCRIPTION

DATE

4

3

2

1

D

C

B


A

D


C

B



A

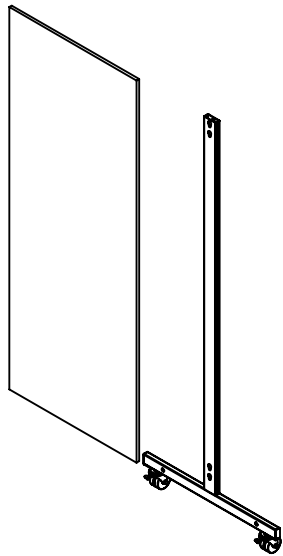

**STEP 1**

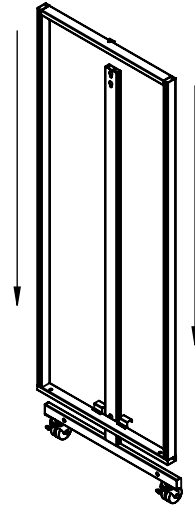

**STEP 2**

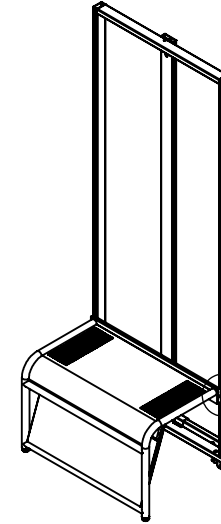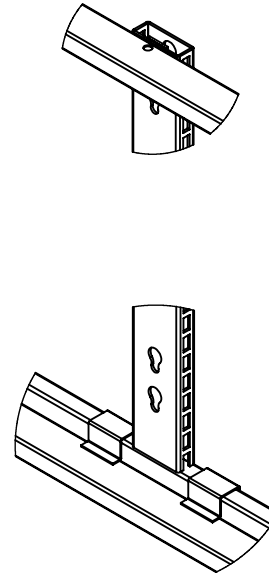

**STEP 3**

14TH SLOT

**STEP 1:** REMOVE THE BOLTS FROM THE END PANEL AND SET IT TO THE SIDE. (NOTE: DEPENDING ON THE SIZE OF THE END PANEL A SECOND PERSON MAY BE REQUIRED TO HELP.)

**STEP 2:** LOWER THE END FRAME FROM THE TOP AS SHOWN UNTIL THE BOTTOM BRACKETS REST ON THE LEGS OF THE UPRIGHT. MAKE SURE THAT THE TOP TAB IS INSIDE OF THE UPRIGHT AS SHOWN.

**STEP 3:** WITH THE SHOE BENCH TILTED UPWARD INSERT THE TOP HOOK INTO THE 14TH SLOT OF THE END FRAME UPRIGHT. ROTATE DOWNWARD UNTIL THE BOTTOM HOOKS ARE INSERTED AS WELL AND LOWER INTO POSITION. FINALLY RUN THE LEVELERS ON THE BOTTOM UNTIL THEY REACH THE FLOOR.

**madix**  
**Asy-80017452**

P.O. BOX 729 TERRELL, TEXAS 75160  
214-515-5400 / 800-776-2349

PAGE 1 OF 1 REV. 00

06/08/09 CAB ECM # 500000006585

4

3

2

1