
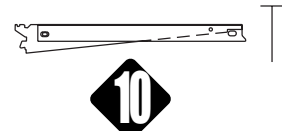
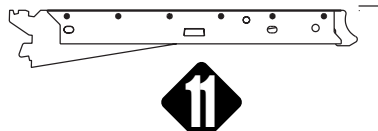
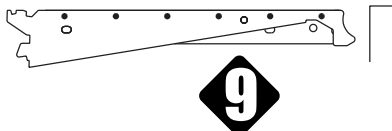
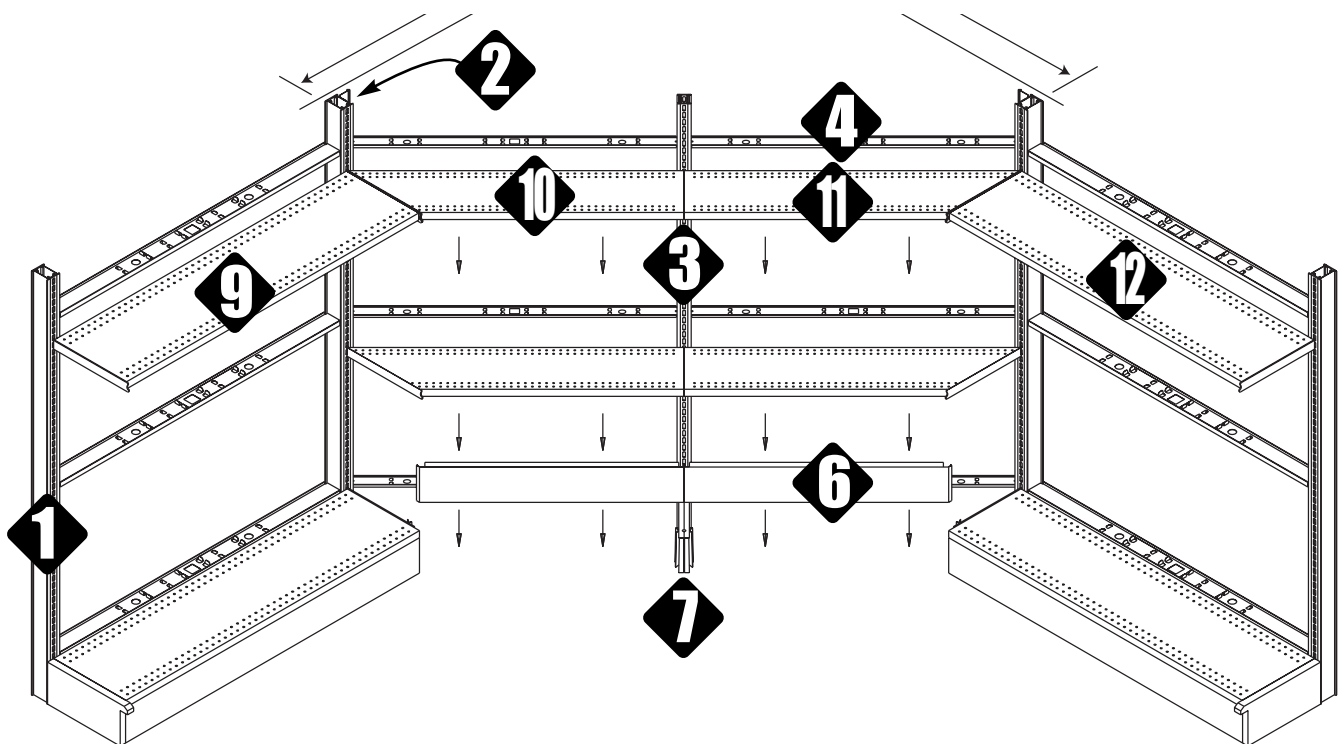


# INSIDE CORNER BASE SHELF - 8' SPAN

## ASY 367

### INSTALLATION INSTRUCTIONS

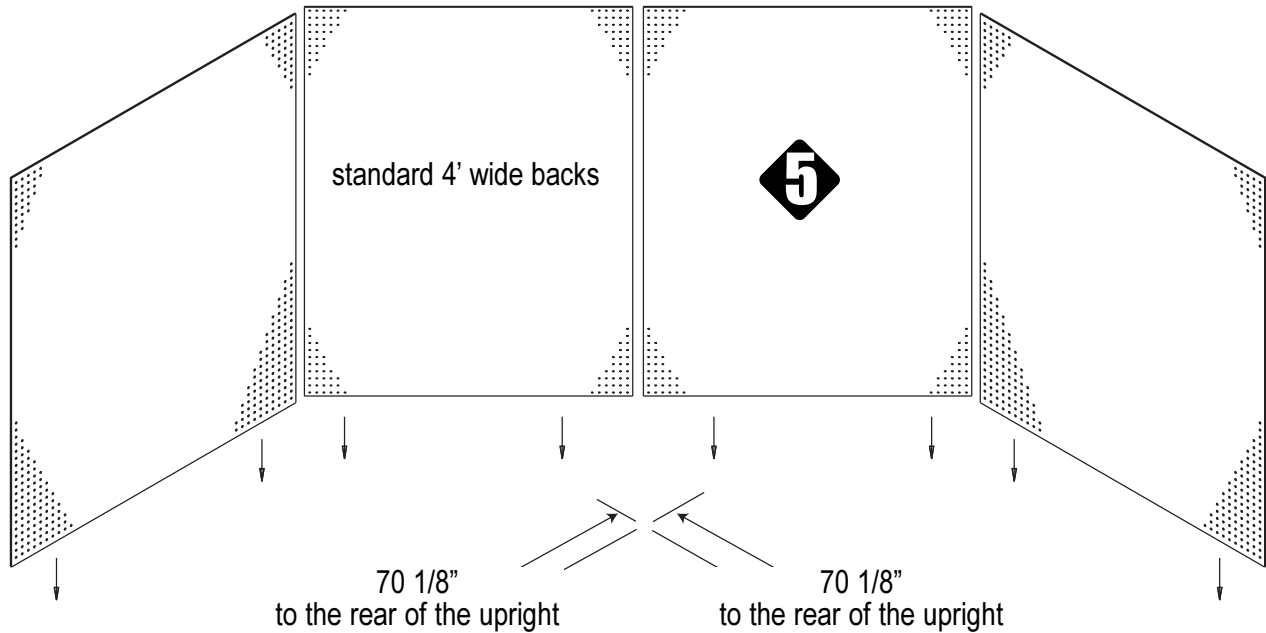

# INSIDE CORNER BASE SHELF - 8' SPAN

# ASY 367

## INSTALLATION INSTRUCTIONS

- 1** Position the first section of each shelving run as illustrated, noting to keep the runs perpendicular with each other and maintaining the 70 1/8" dimensions as noted.
- 2** Install the inside corner side retainers [ICSR-(NH)].
- 3** Assemble the center base shoe [BS-(ND)] and upright [BU-(NH)].
- 4** Install the required 4' spanners. This will locate the center base shoe and upright to the correct location.
- 5** Insert the backs.
- 6** Slide the inside corner kick plates [IC8KP-(ND)(nh)] into the base shoes [BS-(ND)] from the top. (Parts for complete corner, both right and left parts, come with).
- 7** Place the inside corner 8' span base shelves on top of the base shoes, hooking the center brackets into the center upright.
- 8** Bolt the inside corner base shelves to each other in the center using the 1/4 - 20 fasteners provided with the 8' inside corner base shelf kit.
- 9** Install one of the standard upper shelves at the desired height in the left section of the gondola. Insert the left hand bracket of the 8' inside corner at the same height as the standard upper shelf. The left hand bracket will have an angle facing toward the center of the inside corner system. See illustrations for bracket identification.
- 10** Place the left hand section of the inside corner shelf onto the left hand bracket installed in previous step. While supporting the left shelf section with one hand, place the center bracket in the center upright and position the shelf over the angle on the bracket. See illustrations for bracket identification.
- 11** Place the right hand section of the inside corner system onto the center bracket installed in previous step. While supporting the right hand section, place the right hand bracket in the upright at the same height as the other shelves and brackets, placing the right end of the right hand shelf on the right hand bracket.
- 12** Place a standard upper shelf in the normal run on the right side of the 8' inside corner system. Secure the inside corner system using the 1/4 - 20 fasteners supplied in the hardware pack, using one screw to secure the two halves in the center,) and 2 screws to secure each half shelf to the adjacent standard upper shelf.
- 13** Can be finished with upright caps, top spanners, etc...

Recommended Nominal Base Shoe Sizes for Nominal Shelf Depths

Nominal Depth	Base Shoe Depth
12	10
13	11
14	11
15	12
16	13
17	14
18	14
19	15
20	16
21	16
22	17
23	18
24	19
25	19
26	20
27	21
28	21
29	22
30	23
31	23
32	24



P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349  
 P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282



REV#	ECN#	REVISION	BY	DATE	REV#	ECN#	REVISION	BY	DATE
A	PCR3886	WAS "B SIZE" DRAWING, REWORDED FOR BETTER UNDERSTANDING	NRD	9/29/98					
B	PCR3892	ADDED ILLUSTRATIONS OF BRACKETS	NRD	10/1/98					
C	PCR5533	REVISE LAYOUT	ACM	12/5/00					