

ASY FOR SHOE BENCH END CAP

REV. 2

DESCRIPTION

DATE

4

3

2

1

D

D

C


C

B


B

A



A

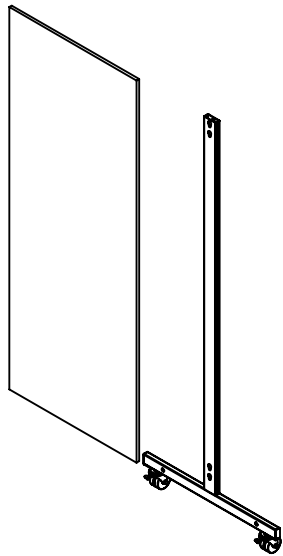


STEP 1

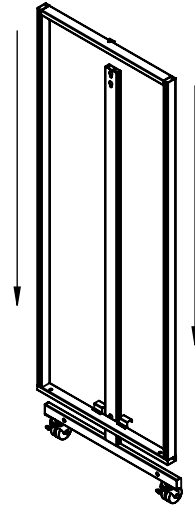

STEP 2

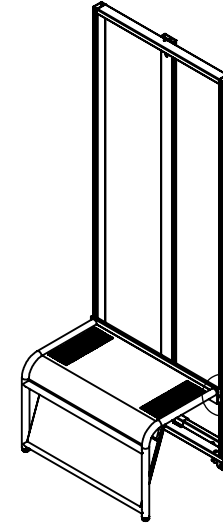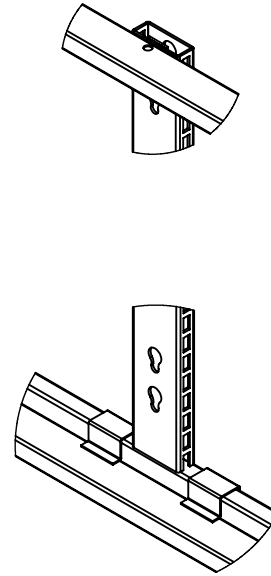

STEP 3

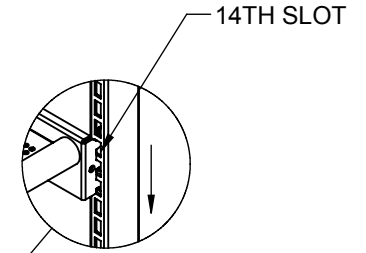

STEP 1: REMOVE THE BOLTS FROM THE END PANEL AND SET IT TO THE SIDE. (NOTE: DEPENDING ON THE SIZE OF THE END PANEL A SECOND PERSON MAY BE REQUIRED TO HELP.)

STEP 2: LOWER THE END FRAME FROM THE TOP AS SHOWN UNTIL THE BOTTOM BRACKETS REST ON THE LEGS OF THE UPRIGHT. MAKE SURE THAT THE TOP TAB IS INSIDE OF THE UPRIGHT AS SHOWN.

STEP 3: WITH THE SHOE BENCH TILTED UPWARD INSERT THE TOP HOOK INTO THE 14TH SLOT OF THE END FRAME UPRIGHT. ROTATE DOWNWARD UNTIL THE BOTTOM HOOKS ARE INSERTED AS WELL AND LOWER INTO POSITION. FINALLY RUN THE LEVELERS ON THE BOTTOM UNTIL THEY REACH THE FLOOR.

madix
Asy-80017452
 P.O. BOX 729 TERRELL, TEXAS 75160
 214-515-5400 / 800-776-2349
 PAGE 1 OF 1 REV. 00
 06/08/09 CAB ECM # 500000006585

4

3

2

1