
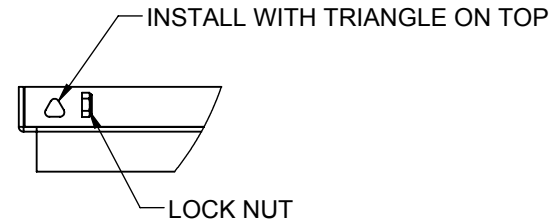



ASY FOR SEISMIC Z BAR

!
**YOU MUST USE TWO (2) SEISMIC Z-BARS FOR EACH SECTION!
 DO NOT OVER TIGHTEN BOLTS.
 HAND TIGHTEN WITH SCREWDRIVER
 ONLY. CORRECT TORQUE IS
 APPROXIMATELY 25-30 LBS**

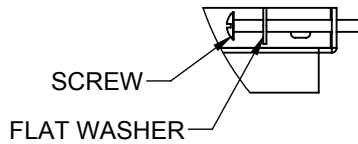

DETAIL "A"


HARDWARE PACK FOR EACH Z-BAR
 INCLUDES:
 2 - SCREWS 1/4-20x2-3/4"
 2 - LOCKING NUTS
 2- 5/16" FLAT WASHER

1) ATTACH ONE Z-BAR APPROXIMATELY
 7-1/2" FROM TOP OF UPRIGHT USING
 PROVIDED HARDWARE.

**DO NOT OVERTIGHTEN. DOING SO COULD
 PREVENT BACK PANELS FROM BEING
 INSTALLED PROPERLY.**

2) ATTACH 2ND Z-BAR APPROXIMATELY
 16" FROM BOTTOM OF UPRIGHT.

NOTE ORIENTATION OF Z-BARS WHEN
 INSTALLING. MAKE SURE TRIANGLE IS
 LOCATED ON TOP. SEE DETAIL "A".

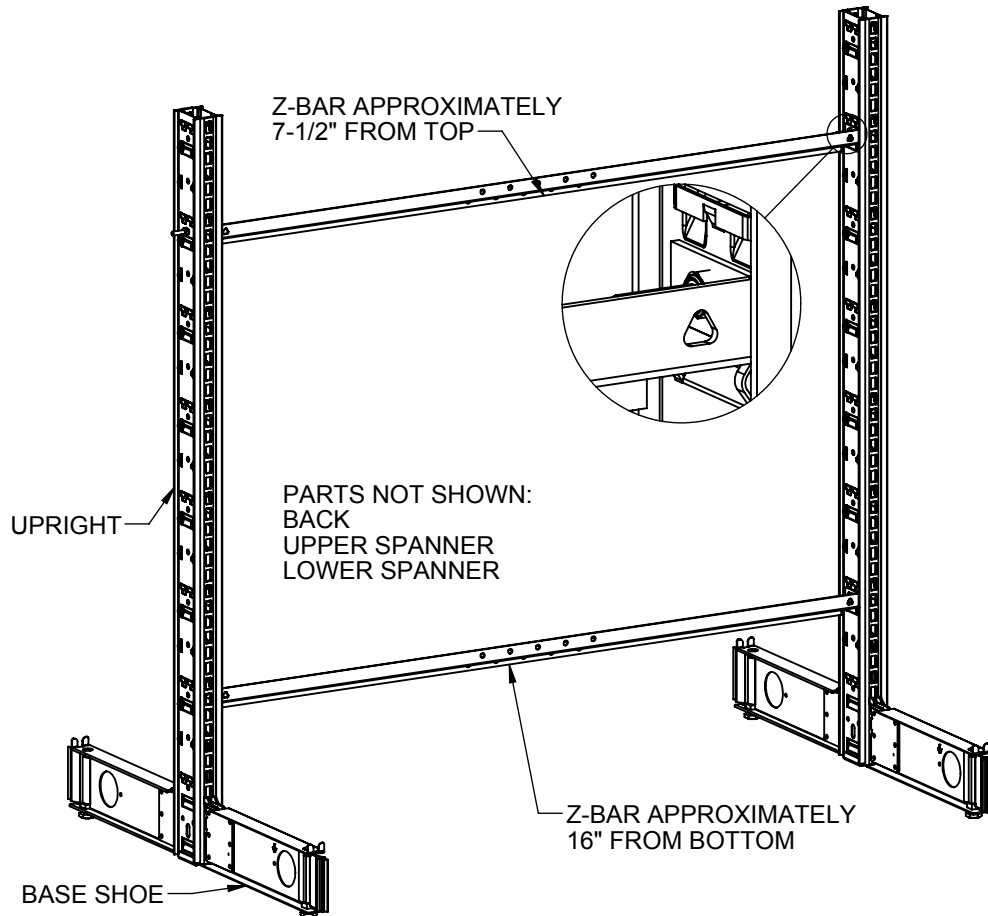

madix
ASY-938
© 2013 Madix Inc., All rights reserved
 20984 AL HWY 9 GOODWATER, AL 35072
 PO BOX 729 TERRELL, TX 75160
 256-839-6354 / 214-515-5400 / 800-776-2349 SHEET 1 OF 1

ABASSETT 20131111	REV. 02 ECM # 500000013791
----------------------	-------------------------------