


# HMFA/ HYPERMAXI ANCHOR

**ASY1-289**

## INSTALLATION INSTRUCTIONS

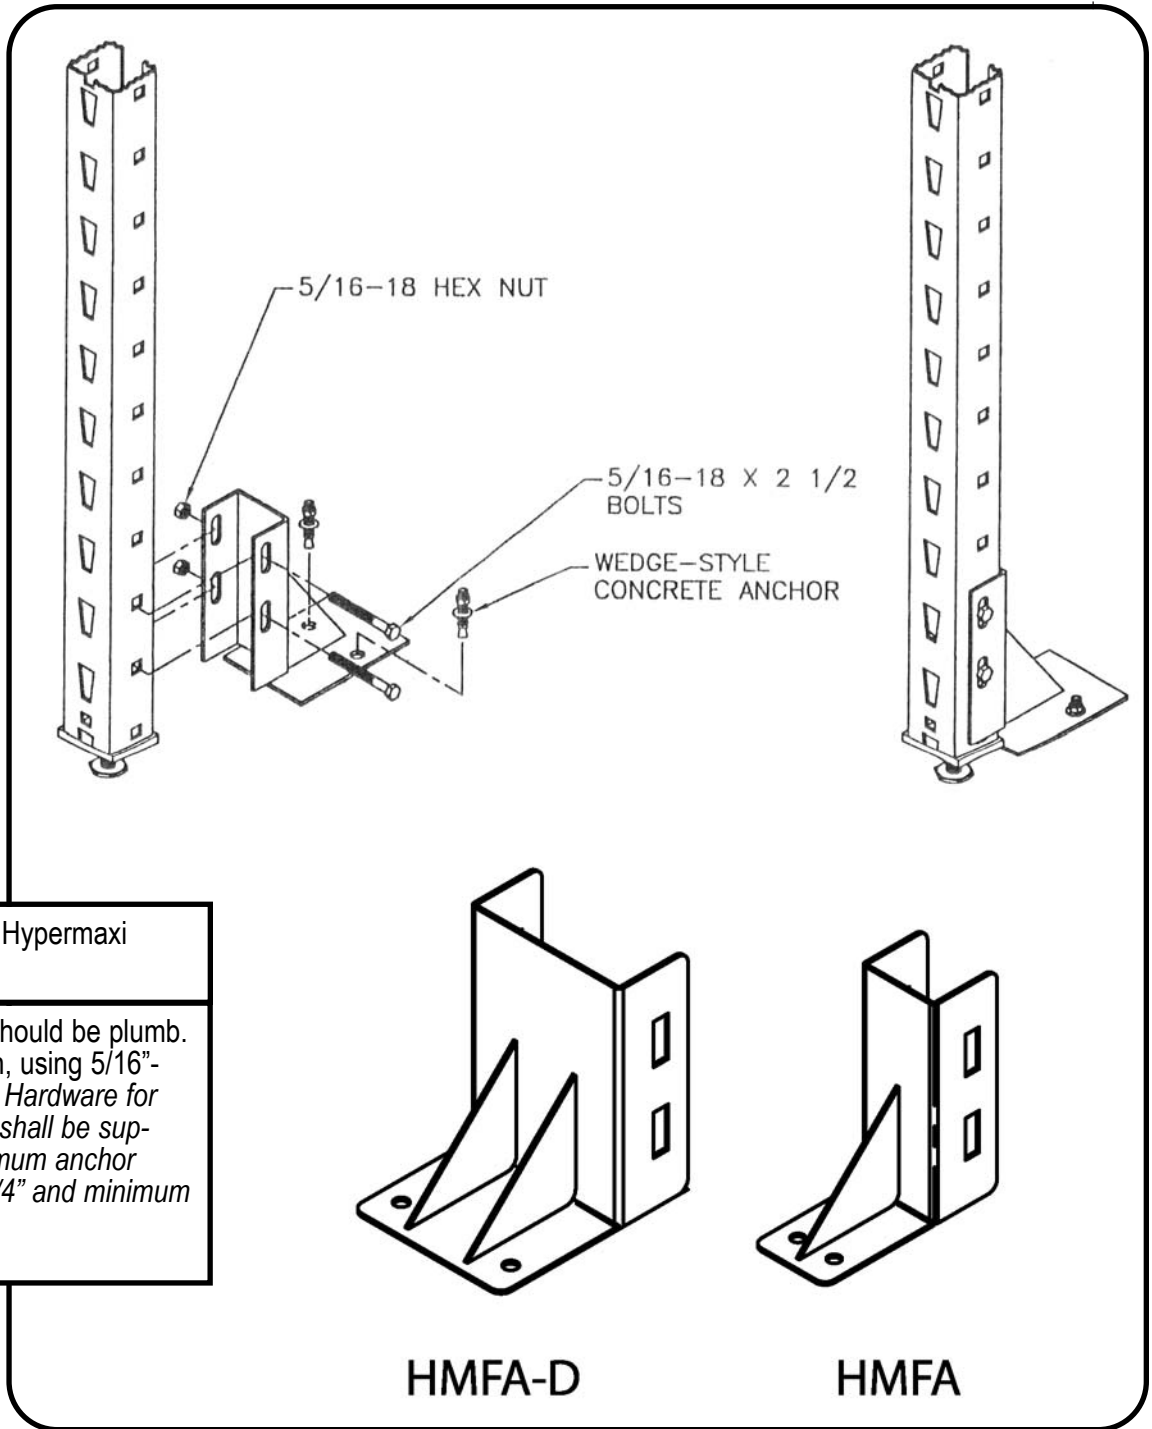

- 1** Refer to ASY-083 for Hypermaxi installation.
- 2** Hypermaxi uprights should be plumb. Install HMFA as shown, using 5/16"-18x2½ bolts and nuts. *Hardware for anchoring to concrete shall be supplied by installer. Minimum anchor diameter required is 1/4" and minimum embedment is 1 1/8".*



P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349  
 P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282

**REV**

REV#	ECN#	REVISION	BY	DATE	REV#	ECN#	REVISION	BY	DATE
	AL3969		AJB	8/13/05					