WIRE GRID PANEL FOR BASIC UPIGHT

ASY 239

ASSEMBLY INSTRUCTION

1 Lift panel to the desired height on the upright. (Make sure the panel is level)

2 Slip the bottom hooks into the appropriate slots on the uprights.

3 Push the top of the panel toward the uprighs; lifting it to allow the top hooks to slip into the upright slots.

4 Allow the panel to drop down into the upright slots; locking the hooks in position.

ASSEMBLY COMPLETE

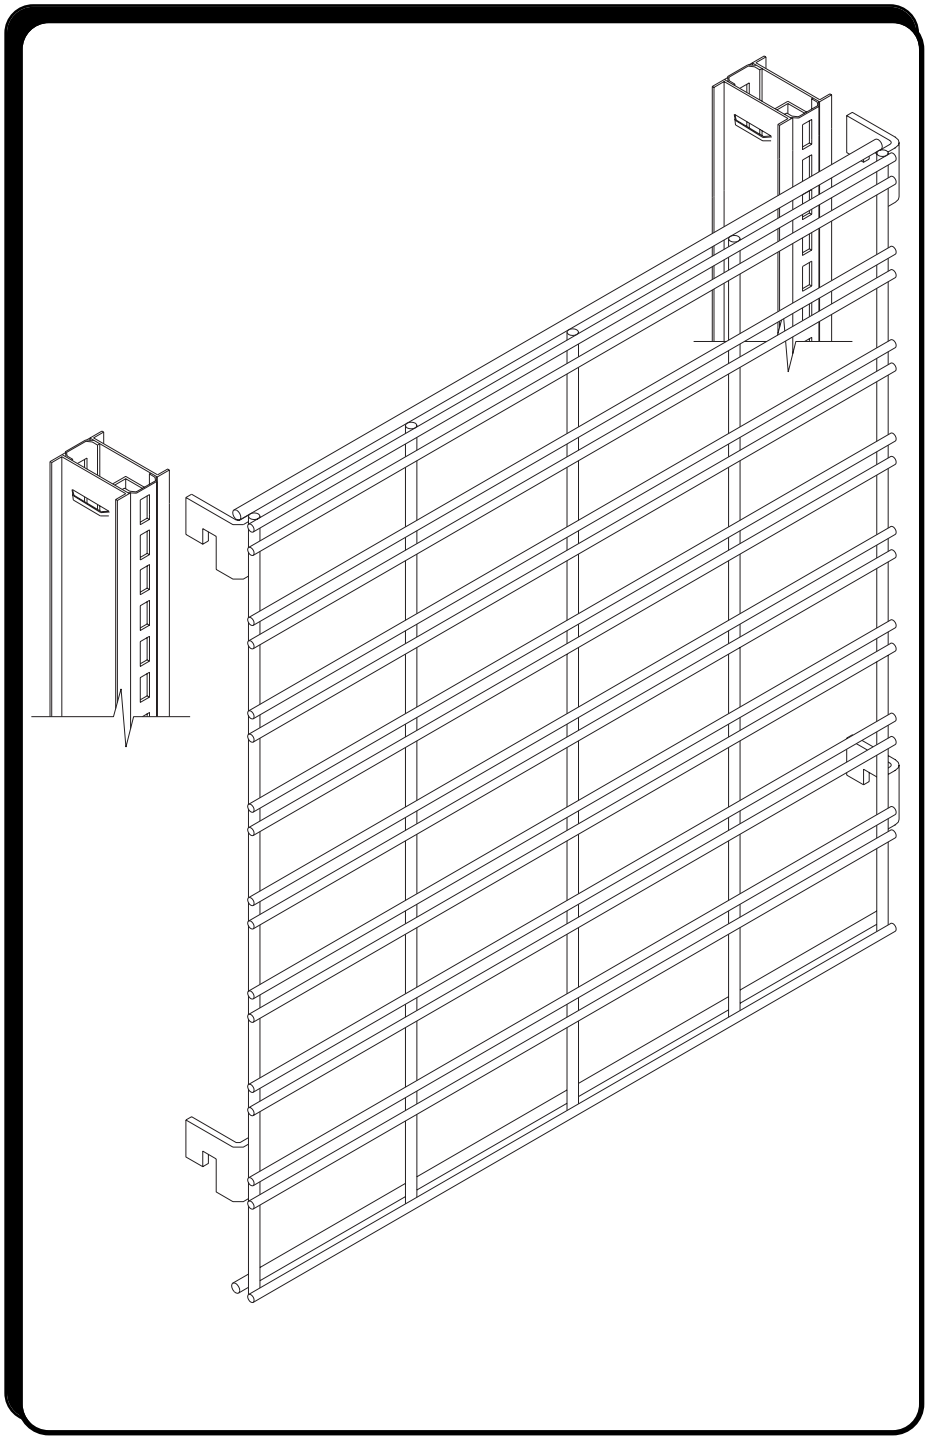

madix™ STORE FIXTURES
P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349
P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 256.839.6354 / 800.633.6282

REV A

REV#	ECN#	REVISION	BY	DATE
A	4912	Revise layout, drawing & instruction	MMH	4/23/01

REV#	ECN#	REVISION	BY	DATE