HANGROD/HANGROD BRACKETS

ASY- 031

INSTALLATION INSTRUCTIONS

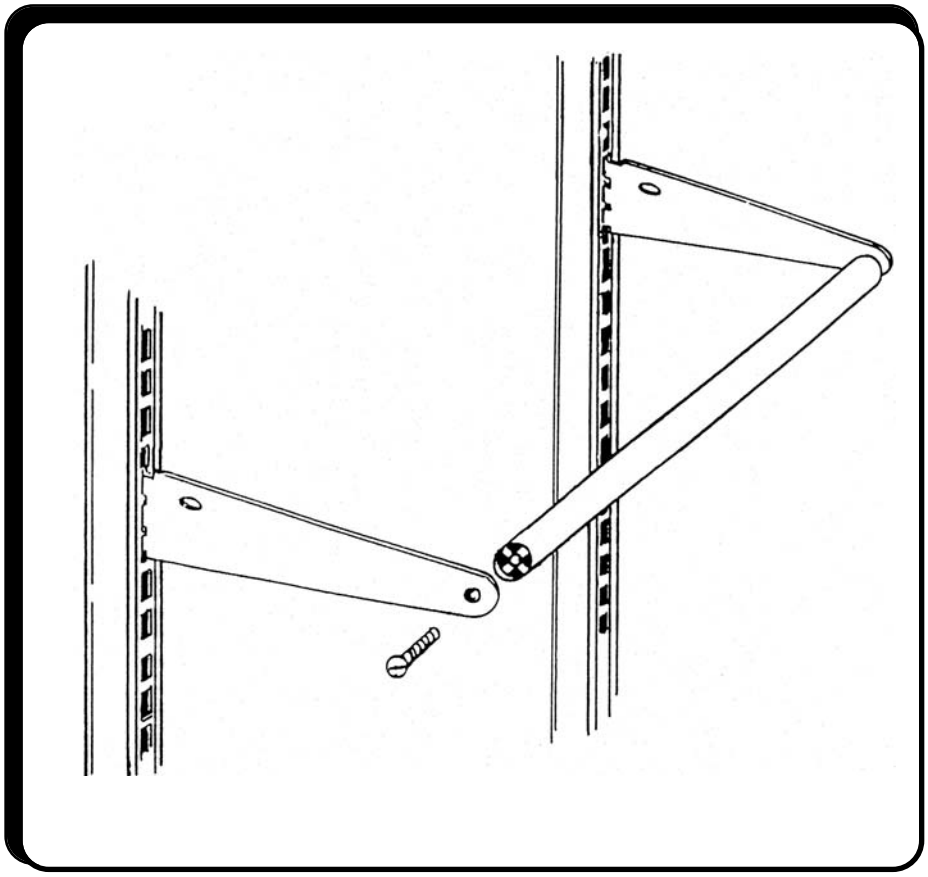

1. Position Hangrod brackets at desired height in the upright slotting.
2. Insert 1/4”-20x1-1/2” screw as shown through hangrod brackets into 1-1/4” steel tubing, tighten set screw.

ASSEMBLY COMPLETE

madix™ STORE FIXTURES
P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349
P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 256.839.6354 / 800.633.6282

REV B

REV#	ECN#	REVISION	BY	DATE
A		convert to new format	MMH	7-18-01
B		correct	AJB	7/10/02

REV#	ECN#	REVISION	BY	DATE